

TRANSPRO 1620 SWINGER

HEAT PRESS USER'S GUIDE MP480




PRO WORLD[®]

HEAT APPLIED GRAPHICS • PRESSES • ACCESSORIES

www.ProWorldInc.com

Pro World Inc.
401 Taylor Ave.
Gordonsville, VA 22942

Toll Free 800-678-8289
Outside U.S. 856-406-1020

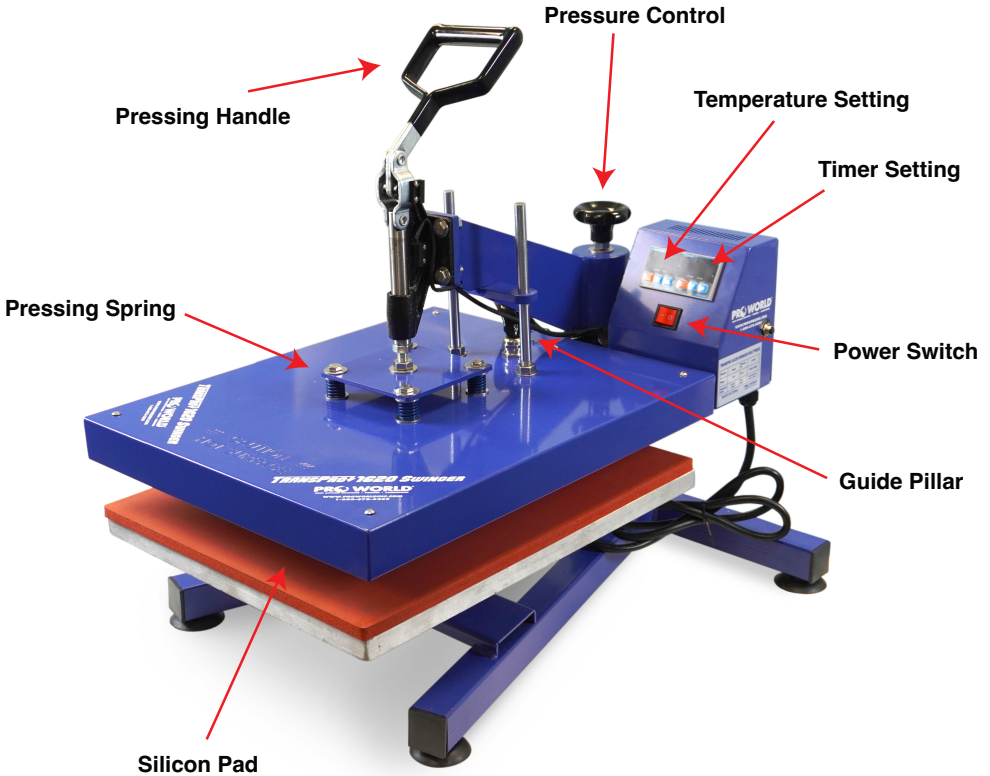

IMPORTANT:

1. The maximum pressure for pressure regulation is when the pressure spring is compressed to the bottom without any gap.
2. Do not exceed when adjusting. Otherwise, it is easy to damage the machine.
3. Please regularly add lubricating grease to the linear movement parts of the guide column and compression handle
4. When shaking your head during homework, please leave room for turning the machine head to avoid burns.
5. When the proximity switch is touched and the start time is counted down.

OPERATION INSTRUCTIONS



Temperature
Setting

Temperature
Reduction

Temperature
Increase

Timer
Setting

Timer
Reduction

Timer
Increase

TRANSPRO WARRANTY

Warranty Coverage

TransPro products offered by Pro World are warranted against defects in material and workmanship. Warranty is void if equipment has been damaged by accident, unreasonable use, neglect, unauthorized and/or improper service, or other causes not arising out of defects in material and workmanship. This warranty does not cover damage caused by normal wear and tear, neglect or lack of proper maintenance. This warranty is for the original purchaser/owner only, it is not transferable.

Warranty Duration

The heating element shall be warranted for the life of the heat press. There is a one (1) year warranty on major components, circuit boards and all other components.

Warranty Performance

During the warranty period, and in the event that a situation cannot be resolved by telephone/email and upon PRE-AUTHORIZATION from Pro World equipment must be shipped, freight prepaid to Pro World for service in the original packaging. After 30 days, all shipping and insurance expenses to and from Pro World of in-warranty equipment is solely the responsibility of the customer. Prior to 30 days the shipping costs will be refunded if Pro World deems the equipment to be defective as stated. Pro World cannot be held responsible for improper handling or any other damage incurred in transit. No charge will be made for labor and components for repair of in-warranty equipment. OUT-OF WARRANTY machines will be charged at the repair rates in effect at the time the machine is received.

Warranty Disclaimers

Pro World shall not be liable for loss of use of TransPro equipment or other incidental or consequential costs, expenses, or damages incurred by the original purchaser or any other user. The above warranty provisions constitute the entire agreement between all parties, and supersede any and all prior written and/or oral representations and understandings.

This "Limited Warranty" applies to all TransPro equipment. However, the procedure for obtaining service may vary outside the continental United States. Contact your Pro World representative for warranty information. The purchaser is responsible for compliance with all local laws, regulations and measure. Agreement shall be governed by and construed in accordance with all applicable laws of said region.



www.ProWorldInc.com

**Pro World Inc.
401 Taylor Ave.
Gordonsville, VA 22942**

**Toll Free 800-678-8289
Outside U.S. 856-406-1020**